

(Importers and Distributors of Electronic Equipment)
140 Darling Road, East Malvern, Vic. 3145, Australia
PO Box 1215
Darling, Vic. 3145, Australia
Telephone: (03) 9571 7719 International: 61 3 9571 7719
Fax: (03) 9571 9977 International: 61 3 9571 9977
E-mail: sales@interscientific.com.au
Web: www.interscientific.com.au

There are two important requirements for installing an accelerometer, and both of these requirements must be met for optimum sensor operation.

1. Proper sensor location - this is often dictated by the bearing type and/or machine operation.
2. A clean, accurate mounting surface for the sensor.


The installation kits from 'General Systems' (Part No's. 831000 & 842000) have been designed to help the installer mount the sensors cleanly, accurately, and quickly - **\$250 plus GST.**

(Part No: 831000 with 10-32 option. Part No: 842000 with 1/4-28 option).

A key component of the installation kit is the 'Spot-Facer tool with Guide-Pin'.

Below is a diagram of the 25 mm Spot-Facer tool we hold in stock - **\$120 plus GST.**

Guide-Pins are interchangeable and come in 1/4-28 and 10-32 sizes.

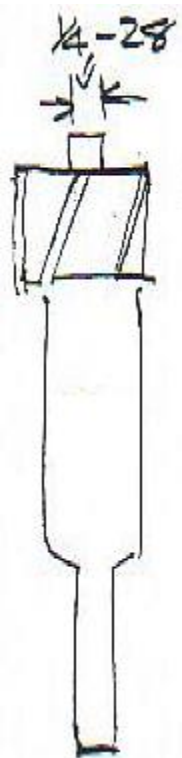

End Elevation

Plan - Drawing Approx. same size